


scale - Full size


Sleeve Queen Cage

Drawn by Gary S. Reuter
University of Minnesota
Dept. of Entomology
12-07-01

36 squares (4.5")

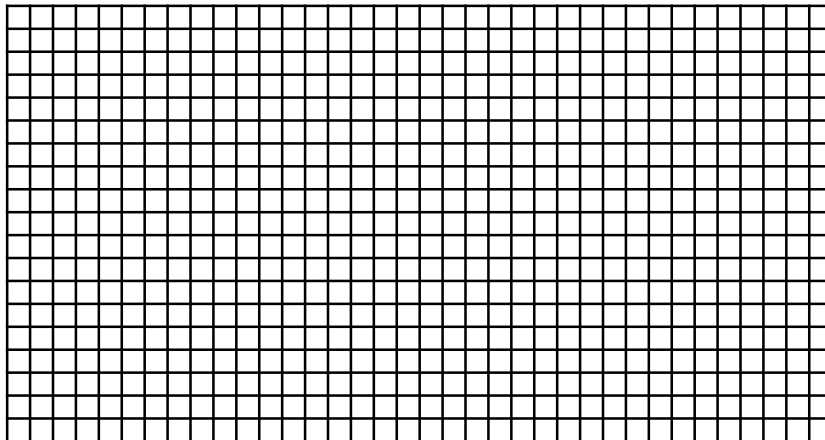


19 squares (2-3/8")

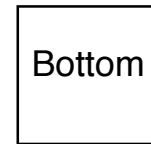

Bottom


Pine
3/8" x 3/4" x 3/4"

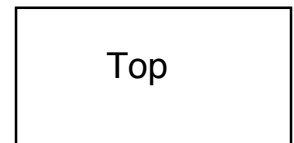

Top


Pine
3/8" x 3/4" x 1-1/2"

8 x 8 hardware cloth
shown full size

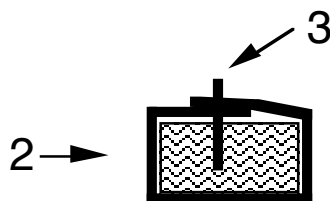


Flashing

Aluminum 3/4" x 2-5/8"

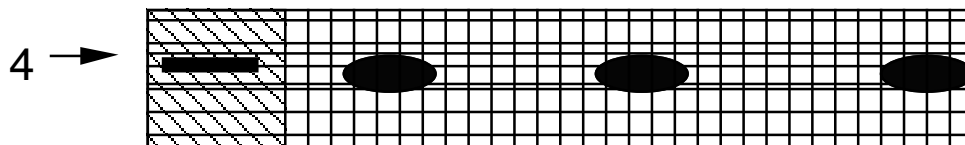

● Solder or epoxy

— staple

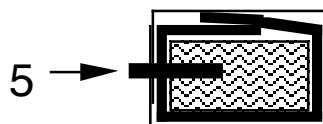

1. Cut pieces as shown above.
2. Roll cloth around 3/8"x 3/4" x 8" stick as shown. Try to bend corners tight so it will keep its shape.
3. Remove from stick. Put bottom in lower end and staple where the ends overlap.
4. Hold the screen so it keeps the proper form and solder or epoxy at least 3 places along the seam on the side.
5. Wrap flashing around the bottom end as shown and staple at the overlap.
6. Wittle the corners of the top so it fits snug.